


## Airbag Systems, wiring for vehicles with wiring repair kit

- Driver's and front passenger's airbag
- Seat belt tensioner
- Side airbags

For vehicles up to Model year 1999 only  
from October 1997

For alternatives to relay and fuse positions as well as multi-pin connector wiring-see "Fitting locations" section.

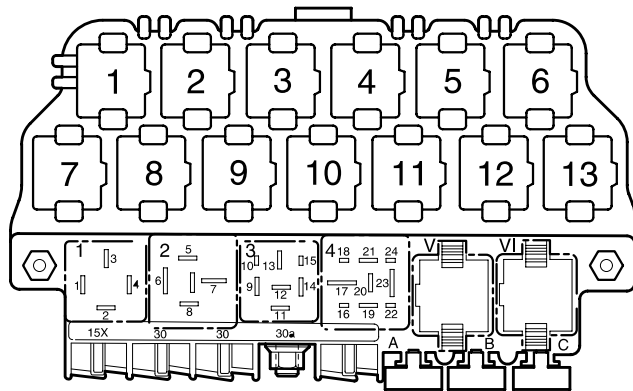

97-14163

Relay locations on 13 position additional relay carrier above the relay plate:

Relay locations on relay plate:

- 1** Dual tone horn relay (53)

Note:


The number in brackets behind the part designation denotes the control number on the housing.

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7.5 A – brown
- 5 A – beige
- 3 A – lilac

**Airbag control unit, airbag coil connector, front airbag igniter, side airbag crash sensors**

- F138 – Coil spring for airbag, return spring with slip ring
- G179– Side airbag crash sensor, front passenger’s side
- G180– Side airbag crash sensor, driver’s side
- H – Horn plate
- J4 – Dual tone horn relay
- J234 – Airbag control unit
- N95 – Airbag igniter, driver side
- N131– Airbag igniter 1, front passenger side
- T5b – 5-pin connector, next to steering column
- T5j – 5-pin connector, in steering wheel
- T50 – 50-pin connector
- ⓪ – Earth connection, in airbag wiring harness

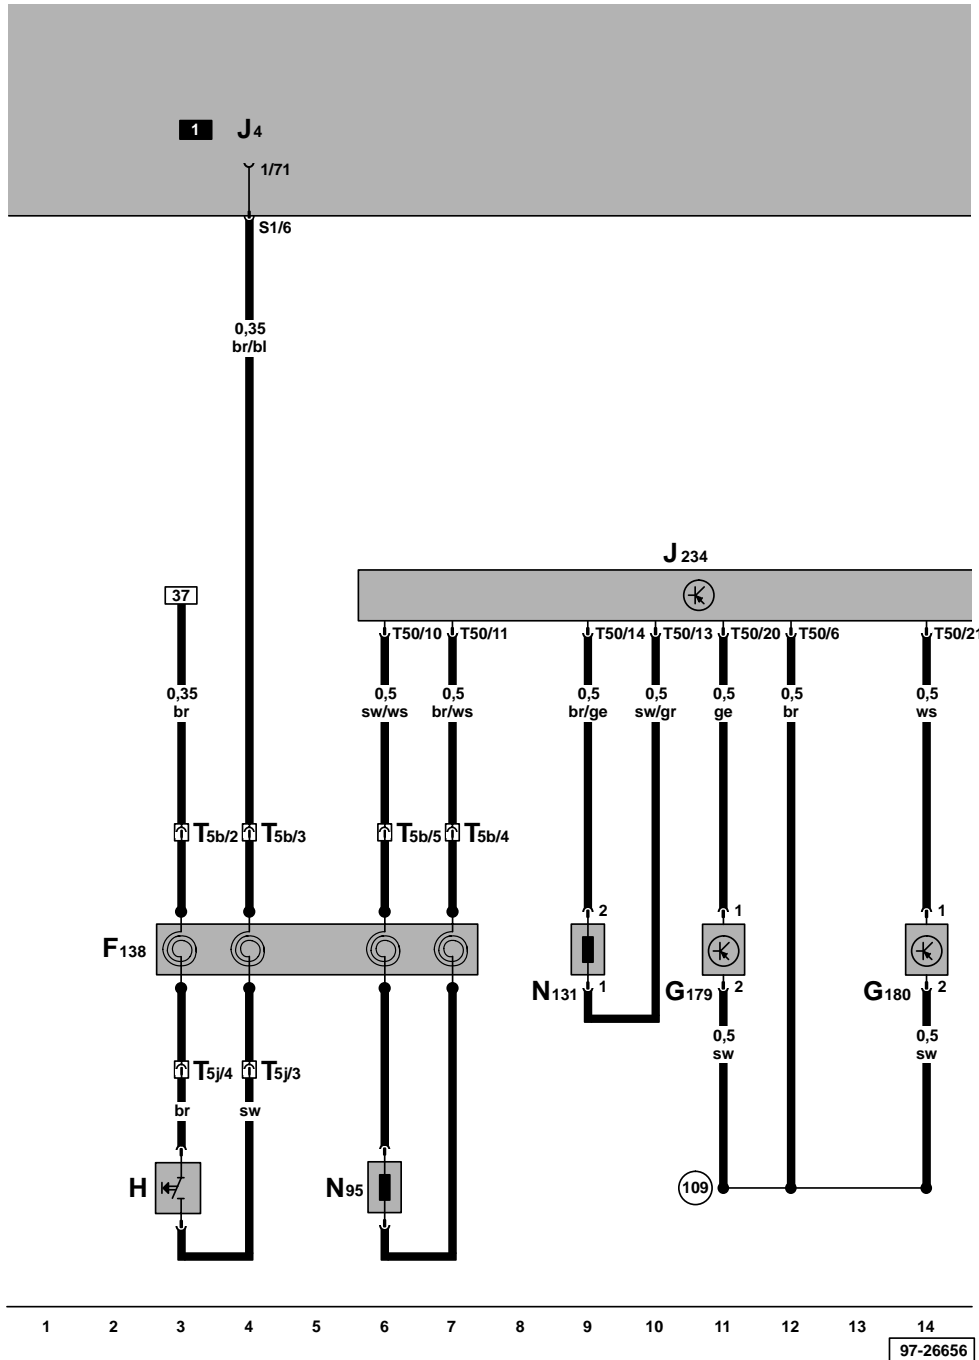


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

**Airbag control unit, side airbag igniter, belt tensioner igniter**

- J234 – Airbag control unit
- N153– Belt tensioner igniter -1-, driver's side
- N154– Belt tensioner igniter -2-, front passenger's side
- N199– Side airbag igniter, driver's side
- N200– Side airbag igniter, front passenger's side
- T2 – 2-pin connector, under driver's seat
- T2a – 2-pin connector, under driver's seat
- T3 – 3-pin connector, under driver's seat
- T3a – 3-pin connector, under front passenger's seat
- T50 – 50-pin connector

Ⓧ – Earth connection -2-, in airbag wiring harness

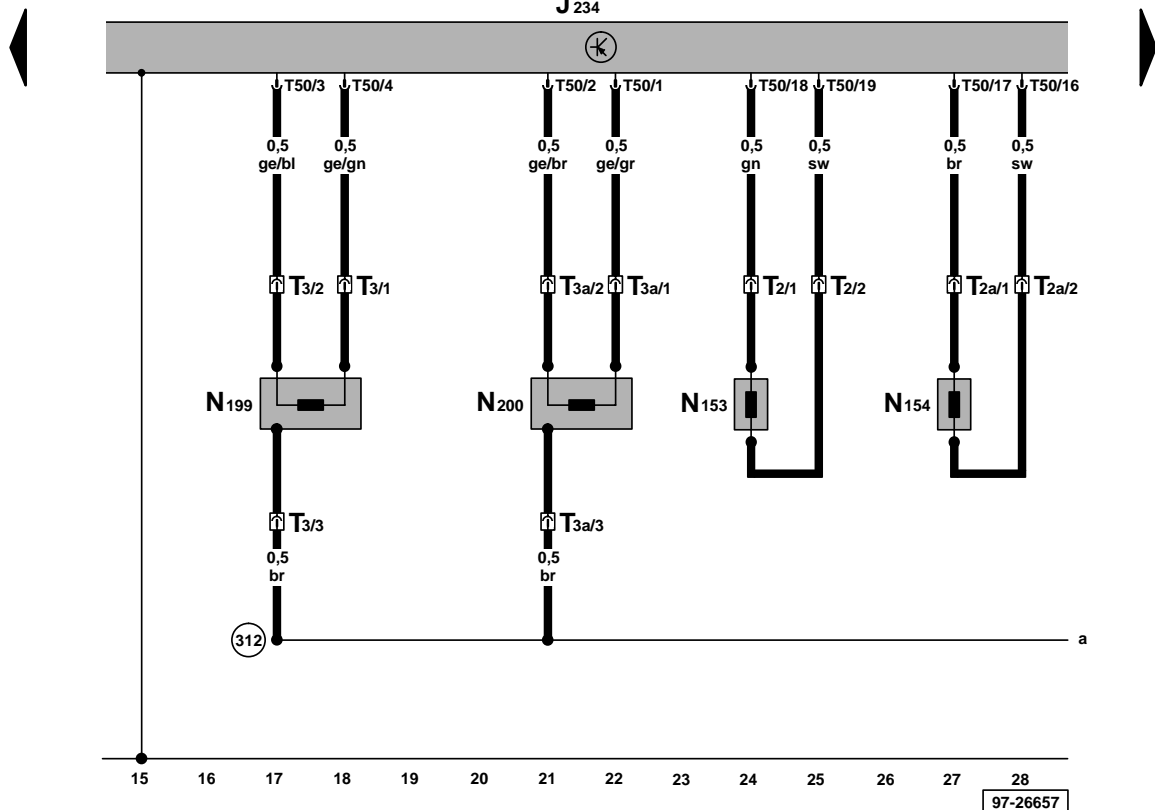

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange


Airbag control unit, airbag warning lamp

- D - Ignition/starter switch
- J234 - Airbag control unit, behind lower console
- J285 - Control unit with display in dash panel insert
- J379 - Central locking and anti-theft alarm system control unit
- J393 - Convenience system central control unit
- K75 - Airbag warning lamp, in dash panel insert
- T4 - 4-pin connector, on right behind dash panel (connection for wiring repair kit)
- T16 - 16-pin connector, in centre of dash panel, self-diagnosis connection
- T32 - 32-pin connector, blue
- T50 - 50-pin connector

- (42) - Earth point, next to steering column
- (81) - Earth connection -1-, in dash panel wiring harness
- (135) - Earth connection -2-, in dash panel wiring harness
- (199) - Earth connection -3-, in dash panel wiring harness
- (312) - Earth connection -2-, in airbag wiring harness
- (A2) - Positive (+) connection (15), in dash panel wiring harness
- (A76) - Connection (diagnosis wire K), in dash panel wiring harness
- (A125) - Connection (crash signal), in dash panel wiring harness

- \* - For vehicles from May 1998
- - For vehicles up to April 1998 only

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

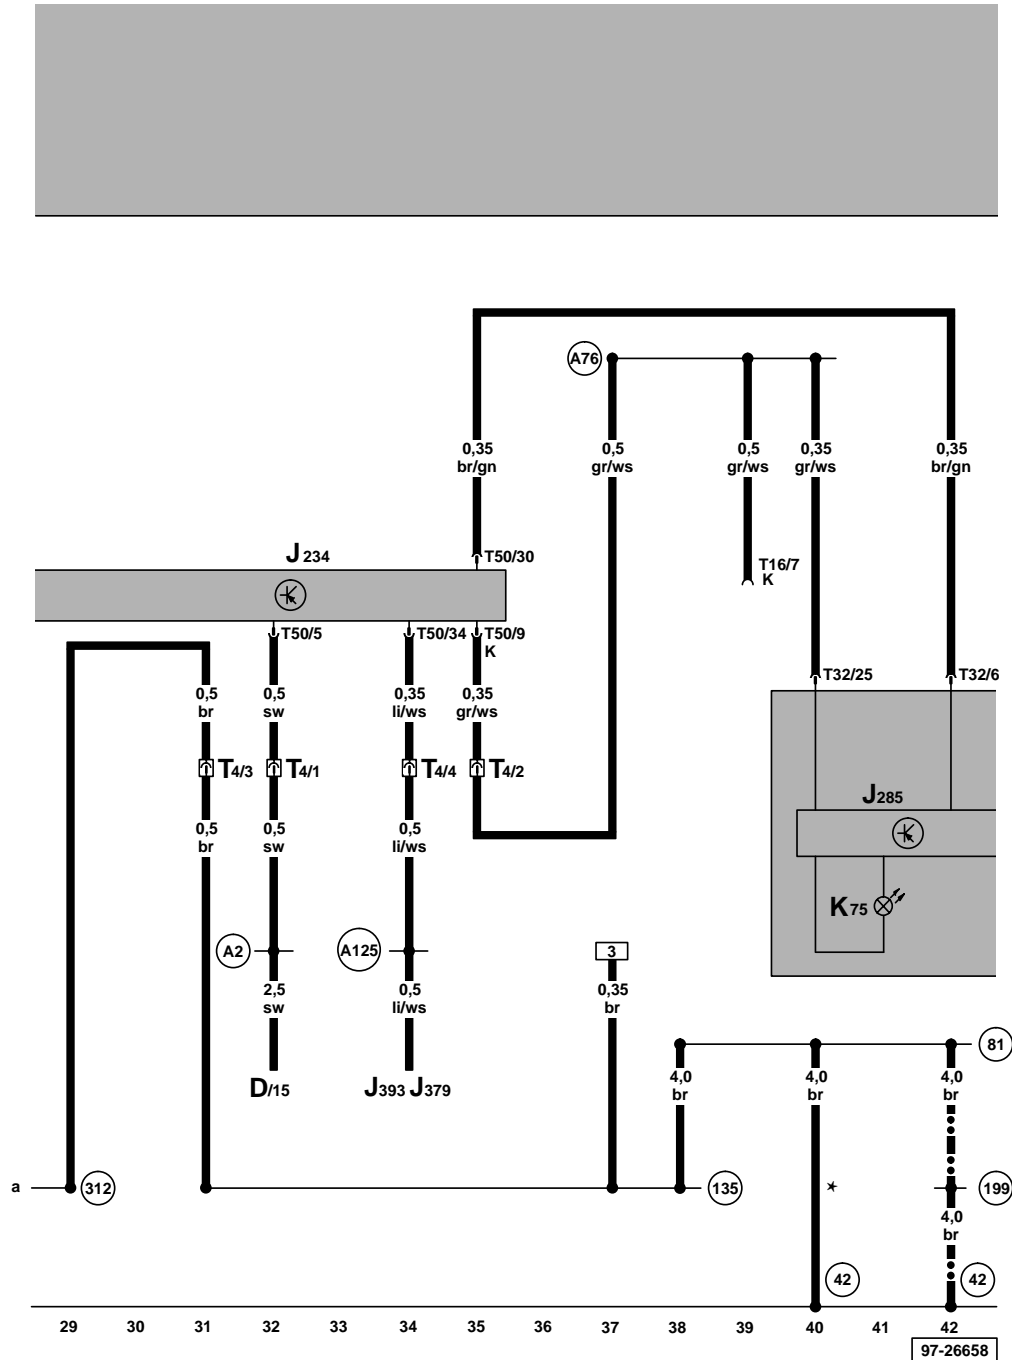

97-26658