


Cruise control system (CCS),

- 1.6 ltr./74 kW Simos, engine code AEH,
- 1.6 ltr./74 kW Simos, engine code AKL,

from October 1997

For alternatives to relay and fuse positions as well as multi-pin connector wiring-see "Fitting locations" section.

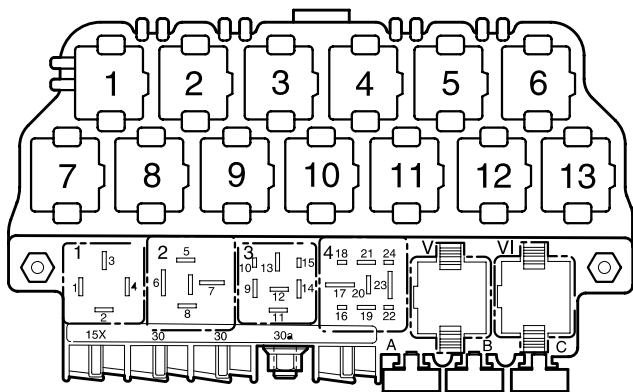

97-14163

Relay locations on 13 position additional relay carrier above the relay plate:

Relay locations on relay plate:

- 4** Fuel pump relay (167), for vehicles up to July 1998
 Fuel pump relay (409), for vehicles from August 1998


Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7.5 A – brown
- 5 A – beige
- 3 A – lilac

Note:

The number in brackets behind the part designation denotes the control number on the housing.

Brake light switch, brake pedal switch for CCS

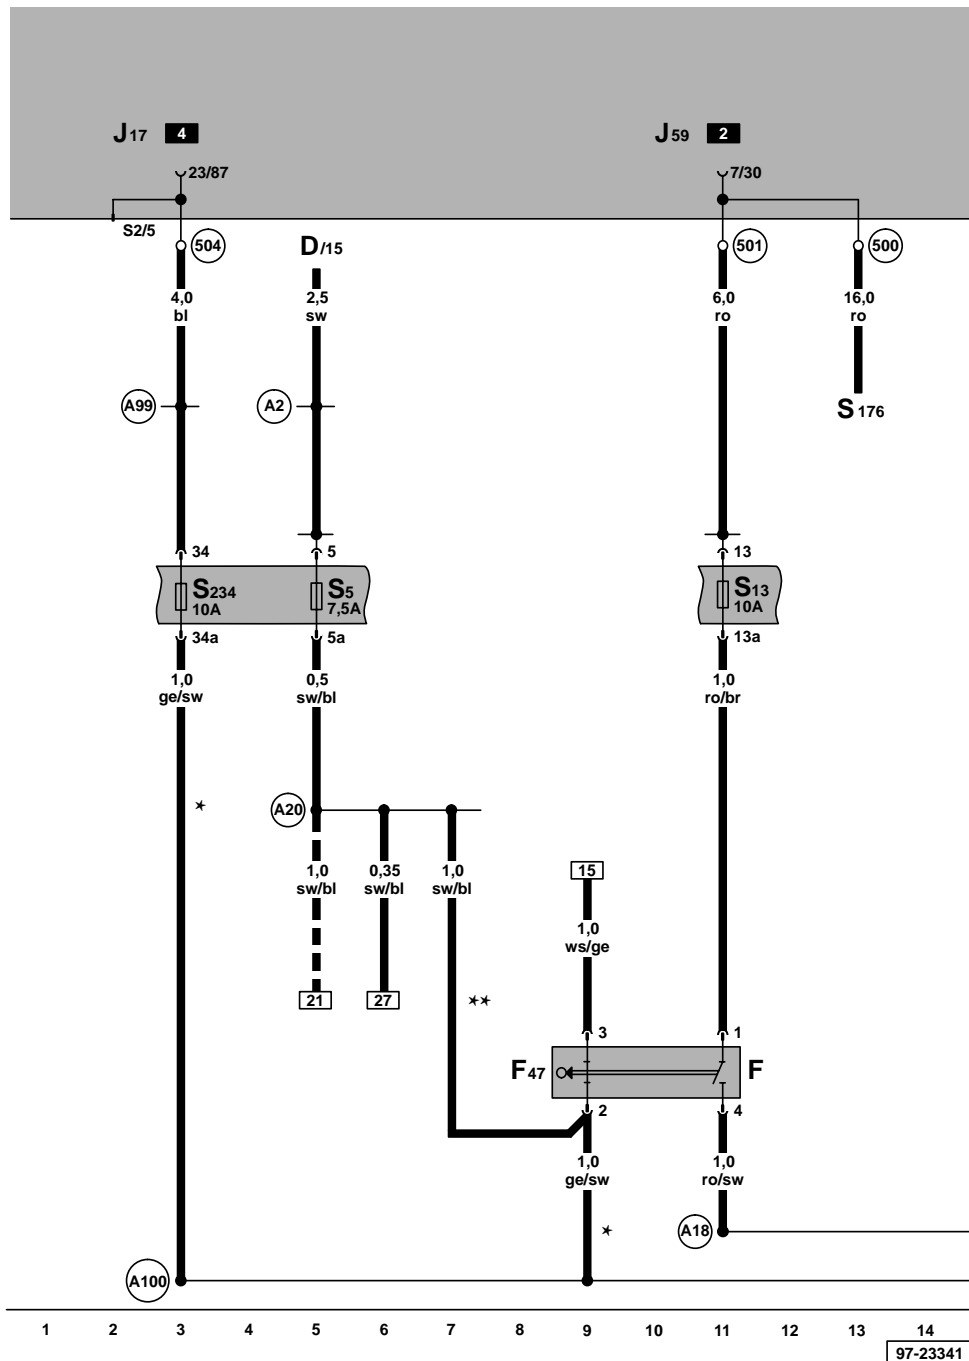

- D - Ignition/starter switch
 - F - Brake light switch
 - F47 - Cruise cont. sys. brake pedal switch
 - J17 - Fuel pump relay
 - J59 - X contact relief relay
 - S5 - Fuse in relay plate fuse box
 - S13 - Fuse in relay plate fuse box
 - S176 - Fuse -4- (30) in battery fuse holder
 - S234 - Fuse in fuse holder
- (500) - Screw connection -1- (30), on relay plate
 - (501) - Screw connection -2- (30), on relay plate
 - (504) - Screw connection -1- (87F), on relay plate
 - (A2) - Positive (+) connection (15), in dash panel wiring harness
 - (A18) - Connection (54), in dash panel wiring harness
 - (A20) - Connection (15a), in dash panel wiring harness
 - (A99) - Connection -1- (87), in dash panel wiring harness
 - (A100) - Connection -2- (87), in dash panel wiring harness, => engine current flow diagram
- * - For vehicles up to March 1998
 - ** - For vehicles from April 1998
 - - - For vehicles with automatic gearbox from April 1998 only


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

Simos control unit, switch for cruise control system (CCS), clutch pedal switch

- E45 - Cruise control system switch
- E227 - Cruise control system (CCS) button (Set)
- F36 - Clutch pedal switch
- J361 - Simos control unit, left in plenum chamber
- T10d - 10-pin connector, green, in protective housing for connectors, left in plenum chamber
- T10e - 10-pin connector, black, in protective housing for connectors, left in plenum chamber
- T10s - 10-pin connector, next to steering column
- T80 - 80-pin connector

- (A18) - Connection (54), in dash panel wiring harness
- (A100) - Connection -2- (87), in dash panel wiring harness, ⇒ engine current flow diagram
- *** - For vehicles with manual gearbox up to March 1998 only

- For vehicles with manual gearbox from April 1998 only
- .-.- For vehicles with manual gearbox only

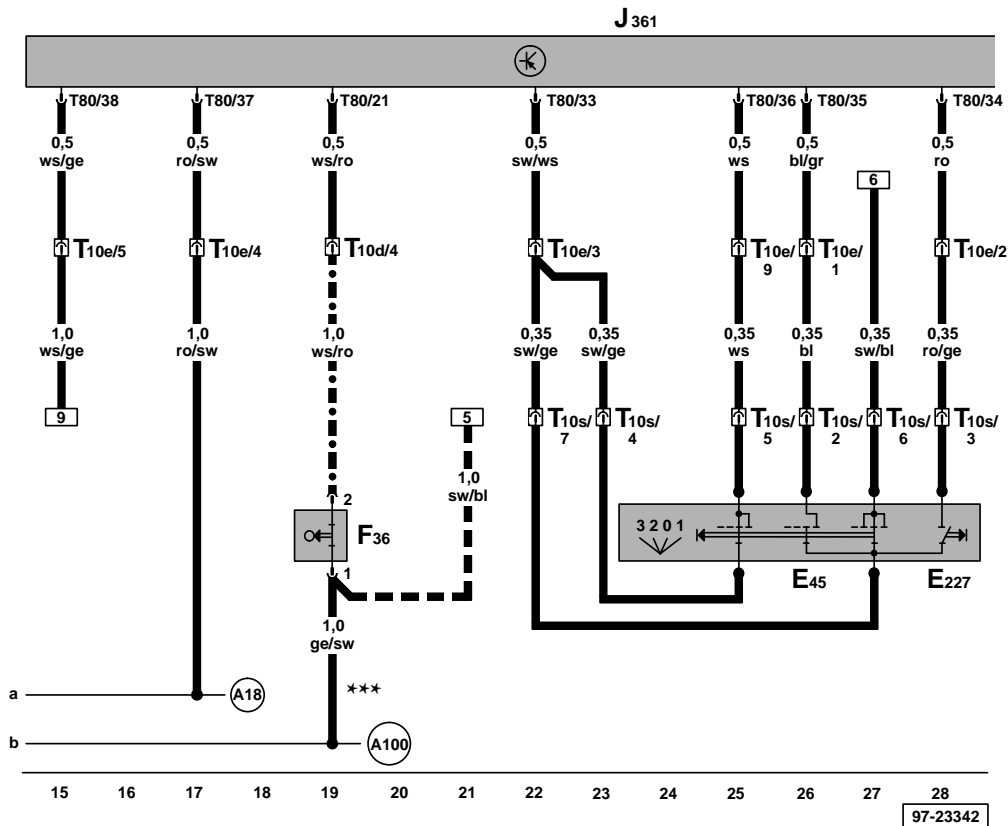


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow

Simos control unit, throttle valve control part

- F60 - Idling switch
- G40 - Hall sender
- G69 - Throttle valve potentiometer
- G88 - Throttle valve positioner potentiometer
- J338 - Throttle valve control unit
- J361 - Simos control unit, leftin plenum chamber
- T8 - 8-pin connector
- T80 - 80-pin connector
- V60 - Throttle valve positioner

- (220) - Earth connection (sender earth), in engine wiring harness
- (D101) - Connection -1-, in engine compartment wiring harness

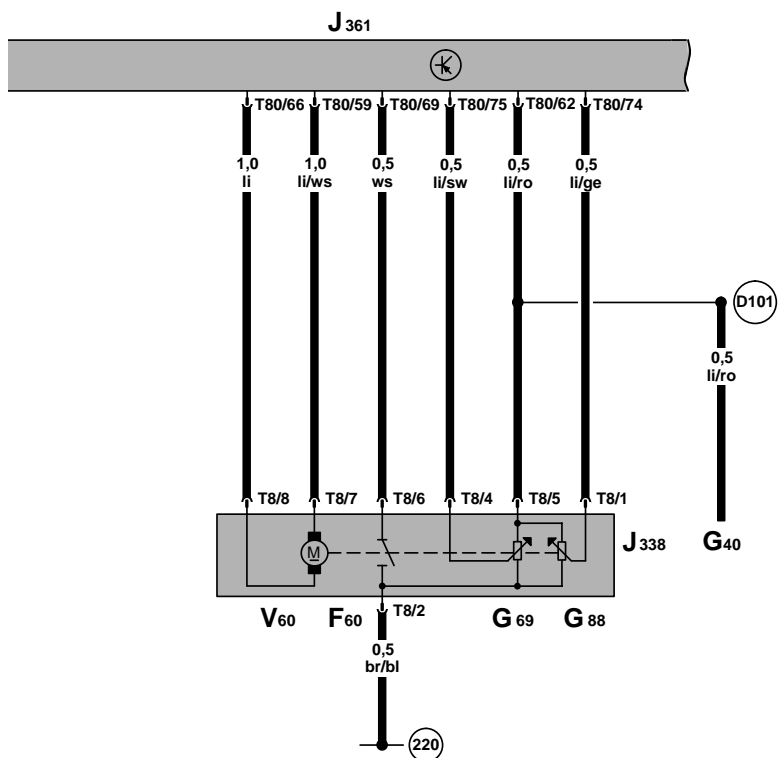

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow